

H-RTK with CubePilot Controller

H-RTK with CubePilot Controller

The Standard H-RTK F9P GPS can be used with CubePilot controller by connecting to **GPS 2** port.

If using Ardupilot with The Cube, set `Serial3_Protocol` to **-1** so that Ardupilot will read GPS2 port for GPS data if there is nothing connected on the GPS1 port.

“ i Info

Note: GPS2 port on both Pixhawk & Cube does not support Safety Switch function. You can use an external safety switch or disable the safety switch on ground control station application.

“ [Image — to be added]

“ [Image — to be added]
